

#### 

Retailer / Qualified Installer

3316023.000

BLUETOOTH SPEAKER

FOR USE WITH:
POWER CHANNEL AWNING
POWER CHANNEL RAIL



Read these instructions carefully. These instructions MUST stay with this product.

Form No. 3316389.000 07/15 (French 3316390.000) ©2015 Dometic Corporation LaGrange, IN 46761 SERVICE OFFICE Dometic Corporation 2320 Industrial Parkway Elkhart, IN 46516

**USA** 

CANADA

Dometic Co

Dometic Corporation 46 Zatonski, Unit 3 Brantford, ON N3T 5L8 CANADA SERVICE CENTER & DEALER LOCATIONS Please Visit: www.eDometic.com

# INTRODUCTION

This Bluetooth Speaker (hereinafter referred to as "speaker" or "product") is designed and intended for use with Dometic Power Channel Awning or Dometic Power Channel Rail.

Use these instructions to ensure correct installation and function of product. Keep these instructions with the product for future reference.

Dometic Corporation reserves the right to modify appearances and specifications without notice.

# **TABLE OF CONTENTS**

NTRODUCTION	2
OCUMENT SYMBOLS	
ONTROLS	
A. Control Buttons	
NSTALLATION	3
A. Attach Speaker To Power Channel	3
B. Remove Speaker From Power Channel	
PERATION	3
A. Pair Speaker	

### **DOCUMENT SYMBOLS**



Indicates additional information that is **NOT** related to physical injury.




Indicates step-by-step instructions.

## CONTROLS

#### A. Control Buttons

See (FIG. 1).

- 1. O ON / OFF (power) button Long press to turn power ON or OFF.
- + Increase button Short press to play the next song. Long press to increase the volume.
- Play / PAUSE button
   Press to play / pause the music.
- 4. ► PREVIOUS / DECREASE button Short press to play previous song. Long press to decrease the volume.

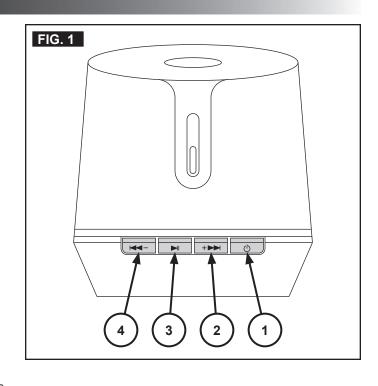


# INSTALLATION

#### Attach Speaker To Power Channel





- 1. Align power bayonet with power channel slot. See (FIG. 2).
  - 2. Insert power bayonet fully into power channel slot, pushing on speaker base (alignment indicator). See (FIG. 2).

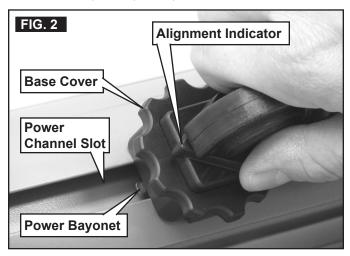

NOTICE Make sure alignment indicator on speaker base is pointed upward after installing into power channel. Otherwise, damage to speaker or power channel could occur.


Rotate base 90°, so longest lobe of power bayonet, and alignment indicator, are pointed upward (toward fabric of awning or groove of power channel rail). See (FIG. 3).

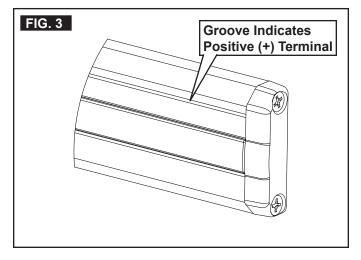


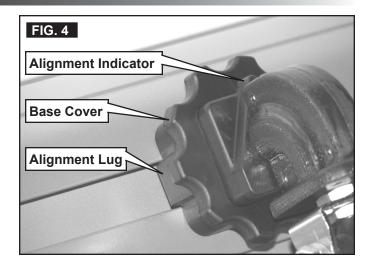

4. When speaker base is properly aligned, alignment lugs on sides of base cover will sit into power channel slot, providing a positive lock. See (FIG. 4).

#### B. Remove Speaker From Power Channel

 

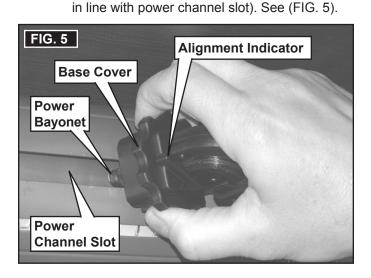

2. Remove speaker from power channel slot and release spring loaded base cover. See (FIG. 5).

# OPERATION



Speaker MUST be installed into Dometic Power Channel to be used. See "A. Attach Speaker To Power Channel" on page (3).

#### Pair Speaker

1. Press "ON / OFF" button for 2 - 3 seconds (long press). Speaker will respond "ready to pair".

- 2. Follow the instructions for your phone or mobile device to allow your device to search for a new Bluetooth connection.
- 3. Select "Dometic BT" on the Bluetooth device list on your phone or mobile device. Speaker will respond "paired successfully" when sync is completed.

# This manual has been provided courtesy of My RV Works, Inc.

www.myrvworks.com



#### You can find more RV service manuals here:

www.myrvworks.com/manuals

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!

DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.