## DON'T FORGET TO WINTERIZE YOUR ICE MAKER

### Dometic<sup>®</sup> REFRIGERATOR BULLETIN R69/4A JANUARY, 1994

If you plan to put the RV into winter storage or continue its use in temperatures below 32°F/0°C without the use of a heat strip/tape (on the refrigerator water solenoid valve and its outlet tube), the ice maker should be drained to prevent component damage and leaks.

#### CAUTION: The heat strip/tape must be approved for use on polyethylene tubing rated at 100 PSI max. at 70°F.; max. temperature 125°F.

Follow these Steps:

- 1. Shut off water supply valve to ice maker.
- 2. Place a shallow pan under water solenoid valve.
- 3. Remove inlet fitting to ice maker water solenoid valve. Drain water from the supply line.
- 4. Remove the plastic nut and water line from outlet side of water solenoid valve. Drain water from the line.
- Cycle ice maker several times while blowing compressed air through water solenoid valve. Be sure all water is out of the solenoid.
  NOTE: Up to 40 PSIG air pressure can be used to clear the valve.
- 6. Reconnect and tighten lines on water solenoid valve. Leave the water supply turned off until temperatures are above 32°F/0°C.
- 7. Dry out ice maker mold assembly with soft cloth. Place bail arm in UP/OFF position.

# FOR POSSIBLE ALTERNATE METHODS OF WINTERIZING , CONSULT THE OWNER'S AND OPERATOR MANUAL FOR THE RECREATIONAL VEHICLE WATER SYSTEM.

# This manual has been provided courtesy of My RV Works, Inc.

www.myrvworks.com



You can find more RV service manuals here:

www.myrvworks.com/manuals



DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.