



If the Comfort Control Center is not operational, inadequate data or no functions occur, reset the Comfort Control Center to factory setting. When a reset procedure is done, all previous program memory is removed. The factory setting of 72°F for cooling mode and 68°F for heating modes are entered.

To **initiate a RESET, do the following in the order listed:**

- 1) Turn control on to ensure annunciator data and light are present. If data and light are present, continue to next step. If data and light are not present, see Sec. 5.1.
- 2) Depress MODE switch to activate annunciator light.
- 3) Simultaneously depress the bottom two buttons (temperature UP and DOWN) and hold.
- 4) While holding these buttons down, depress the MODE button once and release.
- 5) Release the two buttons previously held down.
- 6) Depress the MODE button once again.
- 7) At this time the light should extinguish, and the mode should register "OFF". If not, repeat Steps 2 through 6.
- 8) Retest system ensuring that all functions are present and operational.

This manual has been provided courtesy of
My RV Works, Inc.

www.myrvworks.com



You can find more RV service manuals here:

www.myrvworks.com/manuals

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!



DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.