



AIRXCEL, INC. - SUBURBAN DIVISION

676 Broadway Street

Dayton, Tennessee 37321

423-775-2131

www.AIRXCEL.com



## REPLACEMENT PARTS LIST AND PARTS ILLUSTRATIONS VERTICAL MOUNTING OF MODELS



**SFV-35Q • SFV-42Q  
SFV-35FQ • SFV-42FQ**

**Only factory authorized parts are to be used.  
Do not attempt to repair defective parts.**

When ordering repair parts from your dealer or a distributor, always give the following information:

1. Part Number (Not Item No.)
2. Part Description
3. Model No. and Serial No. of your Furnace
4. Number of Parts Required



## LISTE DES PIÈCES DE RECHANGE ET ILLUSTRATIONS DES PIÈCES MONTAGE VERTICAL DE MODÈLES




**SFV-35Q • SFV-42Q  
SFV-35FQ • SFV-42FQ**

**Seules les pièces d'usine autorisés doivent être utilisés.  
Ne pas tenter de réparer les pièces défectueuses.**

Lors de la commande de pièces de rechange auprès de votre revendeur ou un distributeur, toujours donner les informations suivantes:

1. Numéro de pièce (Non Point N°)
2. Description de la pièce
3. Numéro de modèle et de série de votre Chauffe
4. Nombre de pièces nécessaires

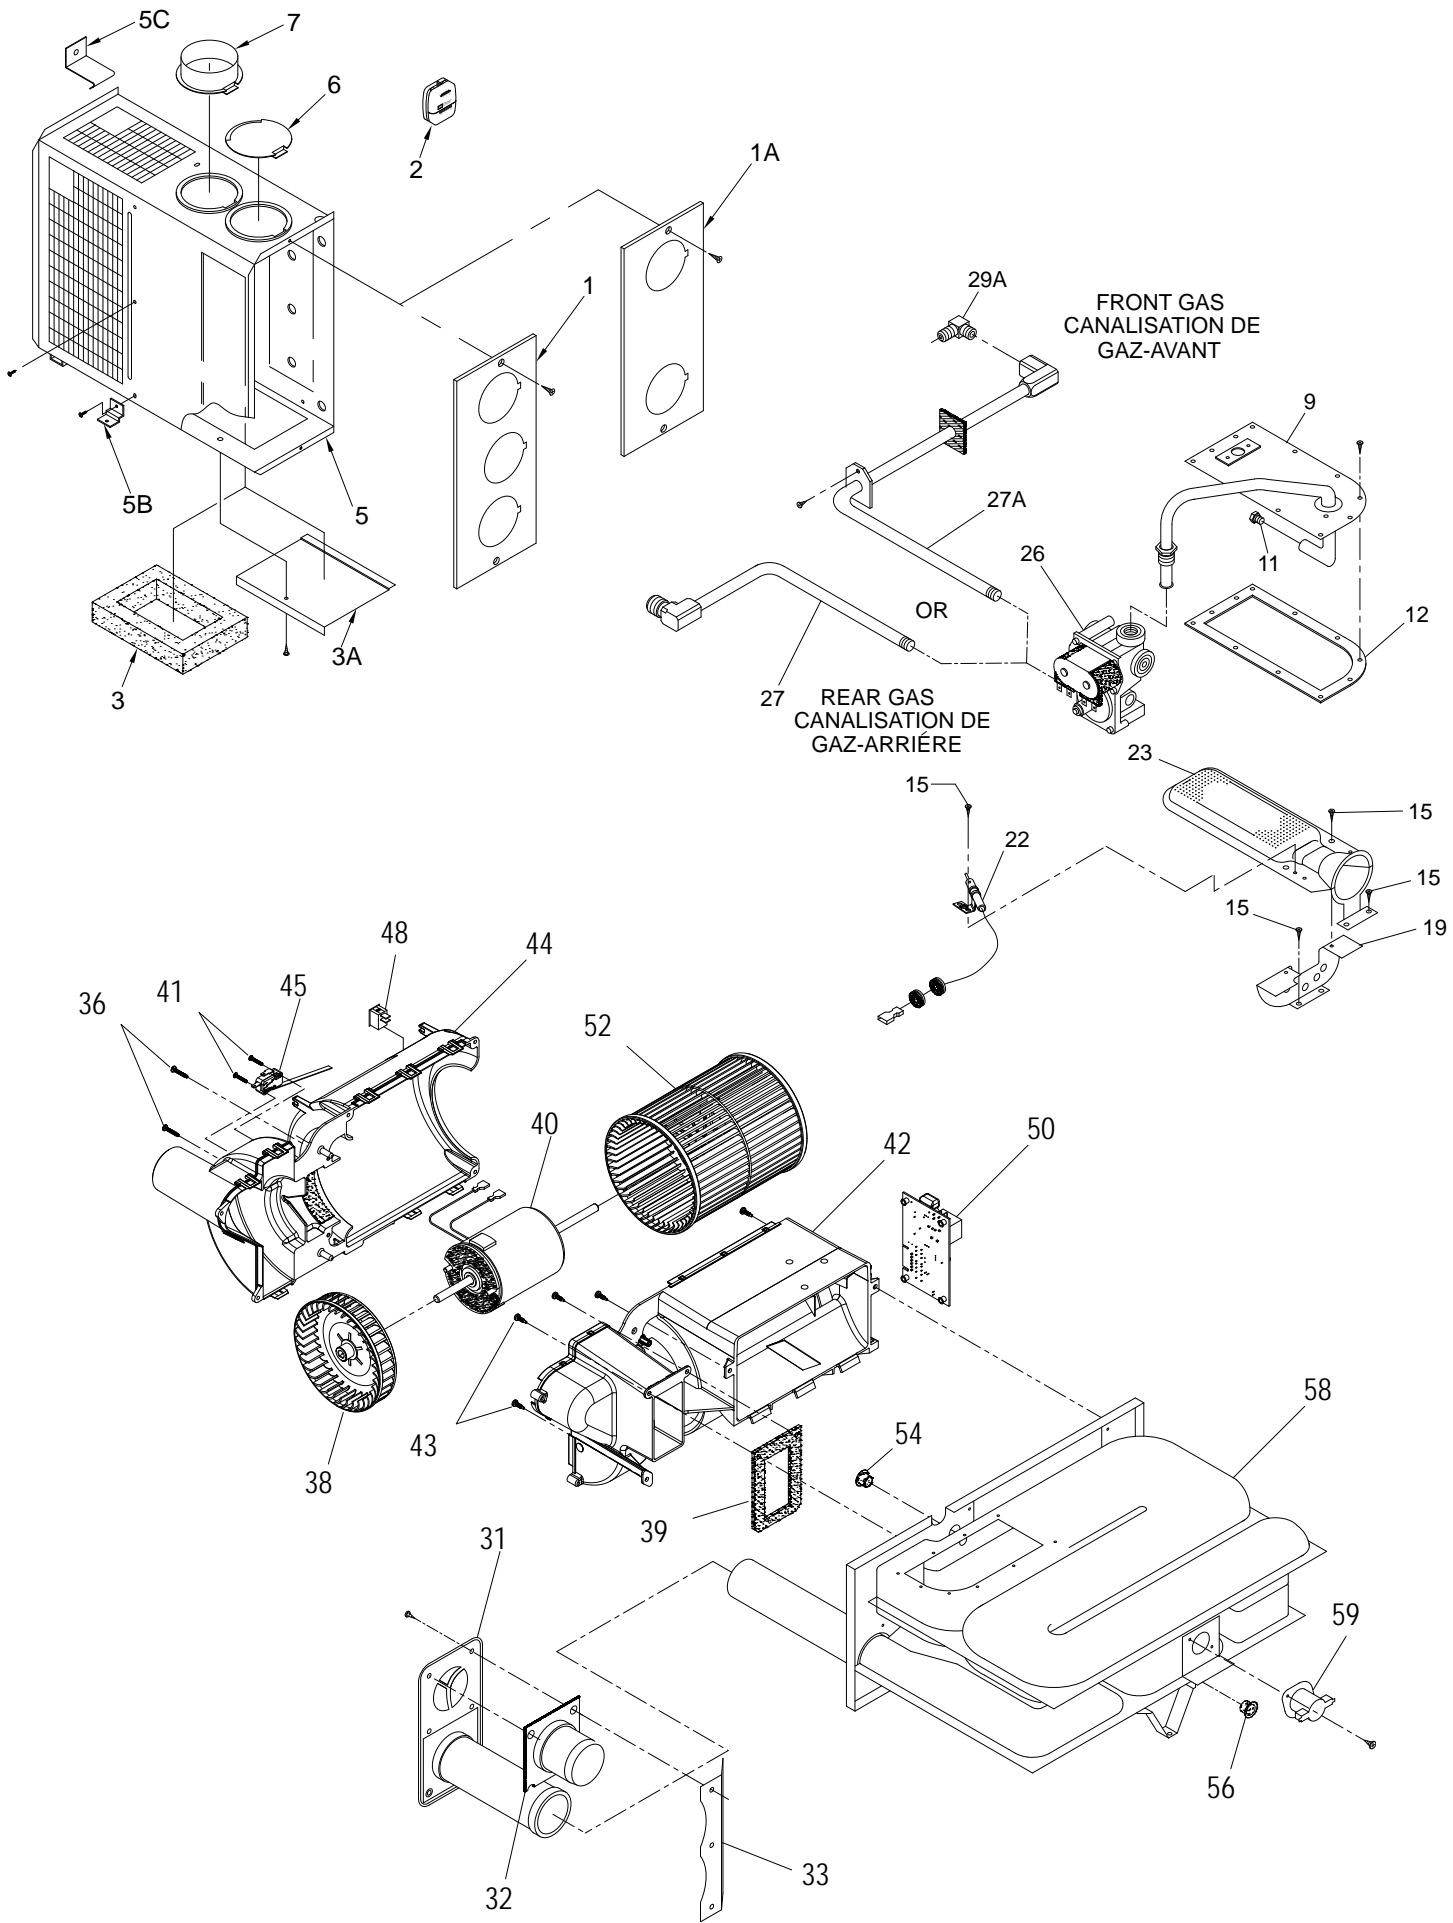

ITEM NO.	DESCRIPTION	PART NUMBER
1	Cabinet Front (SFV-35/42Q, 35/42FQ)	101242
2	Thermostat	161154
3	Gasket, Bottom Duct	071195
3A	Plate, Discharge Cover SFV-35/42Q, 35/42FQ ONLY (Accessory)	063581
5	Cabinet Assembly SFV-35Q, 35FQ	102437
	Cabinet Assembly SFV-42Q, 42FQ	102439
5B	Bracket, Cabinet Mounting (2 Required)	063516
5C	Bracket, Rear Vertical Mounting	063514
6	Cover, Duct	050733
7	Collar, Duct	050715
9	Manifold Assembly Complete	171743
11	Orifice, Main Burner SFV-35Q, 35FQ	180308
	Orifice, Main Burner SFV-42Q, 42FQ	180309
12	Gasket, Burner Access Door	071263
15	Screw 8-18 x 1/2 Stainless	121651
19	Plate, Secondary Air (Bottom) SFV-35FQ	062938
	Plate, Secondary Air (Bottom) (for SFV-42Q and SFV-42FQ only)	062935
22	Electrode	233497
23	Burner Assembly Complete SFV-35Q, 35FQ	010865
	Burner Assembly Complete SFV-42Q, 42FQ	010799
26	Valve	161122
27	Pipe Assembly, Gas Inlet (Rear Gas Models Only)	171574
27A	Pipe Assembly, Gas Inlet (Front Gas Models Only)	171576
29A	Gas Fitting 90° Elbow (Front Gas Models Only)	170374
31	Vent Cap and Exhaust Tube Assembly	260231
32	Tube Assembly Intake (Vent) (Rear Gas Models Only)	051248
	Tube Assembly Intake (Vent) (Front Gas Models Only)	051249
33	Rain Shield	280582
36	Screw #6-19 x 1/2 (2 Required SFV-35/42Q, 35/42FQ)	122001
38	Wheel, Combustion Air SFV-35Q, 35FQ	521235
	Wheel, Combustion Air, Steel SFV-42Q, 42FQ	521236
39	Gasket, Firewall (Combustion Air)	072087
40	Motor Assembly with Gasket SFV-35Q, 35FQ	521231
	Motor Assembly with Gasket SFV-42Q, 42FQ	521232
41	Screw #4-20 x 5/8 (2 Required)	121971
42	Blower Housing, Front Half SFV-35Q, 35FQ	521237
	Blower Housing, Front Half SFV-42Q, 42FQ	521238

ITEM NO.	DESCRIPTION	PART NUMBER
43	Screw #8-18 x 1/2 (5 Required)	121857
44	Blower Housing Rear Half (SFV-35/42Q, 35/42FQ)	521253
45	Switch, Sail	232261
48	Switch ON/OFF	232351
50	Module Board	521099
52	Blower Wheel (Room Air) SFV-35/42Q, 35/42FQ	521233
54	Bushing, Universal	070362
56	Bushing, Strain Relief	071206
58	(Boxed) Chamber/Firewall Assy (SFV-35FQ)	021366
	(Boxed) Chamber/Firewall Assy (SFV-35Q)	021367
	(Boxed) Chamber/Firewall Assy (SFV-42FQ)	021368
	(Boxed) Chamber/Firewall Assy (SFV-42Q)	021369
59	Switch Limit SFV-35Q, 35FQ	232888
	Switch Limit SFV-42Q, 42FQ	232505

N° de repérage	DESCRIPTION	N° de pièce
1	Avant de la caisse (SFV-35/42Q, 35/42FQ)	101242
2	Thermostat	161154
3	Joint Pour Conduit Inférieur	071195
3A	Plaque de formeture (Logement des bouches de décharge, SFV-35/42Q, 35/42FQ Seulement)	063581
5	Cabinet Assemblée SFV-35Q, 35FQ	102437
	Cabinet Assemblée SF-42Q, 42FQ	102439
5B	Support de montage en armoire (2 requis)	063516
5C	Support, montage vertical arrière	063514
6	Couvercle, conduit	050733
7	Bride de fixation, conduit	050715
9	Système de distribution, complete	171743
11	Gicleur à gaz, brûleur principal SFV-35Q, 35FQ	180308
	Gicleur à gaz, brûleur principal SFV-42Q, 42FQ	180309
12	Joint, couvercle d'accès au brûleur	071263
15	Vis N° 8-18 x 1/2, inox.	121651
19	Plaque, air secondaire (bas) SFV-42Q, SFV-42FQ	062935
	Plaque, air secondaire (bas) SFV-35Q, 35FQ	062938
22	Électrode	232497
23	Brûleur, ensemble complet SFV-35Q, 35FQ	010865
	Brûleur, ensemble complet SFV-42Q, 42FQ	010799
26	Valve	161122
27	Tuyau, arrivée du gaz (Q - modèles à gaz arrière)	171574
27A	Tuyau, arrivée du gaz (FQ - modèles à gaz avant)	171576
29A	Raccord - canalisation de gaz (modèles à gaz arriere)	170374
31	Ensemble - bouches d'admission d'air/décharge	260231
32	Tube d'admission d'air (Modèles à gaz arrière)	051248
	Tube d'admission d'air (Modèles à gaz avant)	051249
33	Protection pluie	280582
36	Vis N° 6-19 X 1/2 (12 requis) SFV-35/42Q, 35/42FQ	122001
38	Turbine, air de combustion SFV-35Q, 35FQ	521235
	Turbine, air de combustion SFV-42Q, 42FQ	521236
39	Joint, cloison pare - feu (côté ventilateur)	072087
40	Moteur Avec Joint D'e Chantèité SFV-35Q, 35FQ	521231
	Moteur Avec Joint D'e Chantèetè SFV-42Q, 42FQ	521232
41	Vis N° 4-20 X 5/8 (2 requis)	121971
42	Système d'assemblage ventilateur (air ambiant) SFV-35Q, 35FQ	521237
	Système d'assemblage ventilateur (air ambiant) SFV-42Q, 42FQ	521238

N° de repérage	DESCRIPTION	N° de pièce
43	Vis N° 8-18 x 1/2 (4 requis)	121857
44	Encastrement pour ventilateur (air ambiant) Partie arrière SFV-35/42Q, 35/42FQ	521253
45	Commutateur éolien	232261
48	Commutateur - marche/arrêt	232351
50	La carte du module	521099
52	Turbine de ventilateur SFV-35/42Q, 35/42FQ	521233
54	Bague universelle	070362
56	Bague, passe - fil	071206
58	(Boxed) Chambre / Assemblée Firewall SFV-35FQ	021366
	(Boxed) Chambre / Assemblée Firewall SFV-35Q	021367
	(Boxed) Chambre / Assemblée Firewall SFV-42FQ	021368
	(Boxed) Chambre / Assemblée Firewall SFV-35Q	021369
59	Fin de course SFV-35Q, 35FQ	232888
	Fin de course SFV-42Q, 42FQ	232505

This manual has been provided courtesy of  
My RV Works, Inc.

[www.myrvworks.com](http://www.myrvworks.com)



You can find more RV service manuals here:

[www.myrvworks.com/manuals](http://www.myrvworks.com/manuals)

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!



DARREN KOEPP - OWNER, MY RV WORKS, INC.

*All service manuals provided on [www.myrvworks.com](http://www.myrvworks.com) are believed to be released for distribution and/or in the public domain.*