

OHM Values for FREEZE SWITCH and ROOM SENSORS

<u>CENTIGRADE</u>	<u>FARENHEIT</u>	<u>OHMS X 10,000</u>
13	55.4	1.7254
14	57.2	1.6462
15	59.0	1.5711
16	60.8	1.4998
17	62.6	1.4322
18	64.6	1.368
19	66.2	1.3071
20	68.0	1.2492
21	69.8	1.1942
22	71.6	1.1419
23	73.4	1.0922
24	75.2	1.0459
25	77.0	1.0
26	78.8	0.95722
27	80.6	0.9165
28	82.4	0.87774
29	84.2	0.84083
30	86.0	0.80568
31	87.8	0.77218
32	89.6	0.74026
33	91.4	0.70983
34	93.2	0.68082
35	95.0	0.6531
36	96.8	0.62675
37	98.6	0.60155
38	100.4	0.57751

OHM Values for HEAT ELEMENTS

<u>VOLTAGE</u>	<u>OHMS X 1</u>
120VAC	9
240VAC	30

Slow - Time Delay (T/s)

Green Flash Rapid - X-Mist. or NO A/C

This manual has been provided courtesy of
My RV Works, Inc.

www.myrvworks.com



You can find more RV service manuals here:

www.myrvworks.com/manuals

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!



DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.